

ガラスのたれ・ソースポット

レシピサイト



電子レンジ用



注意
●オープン・直火は
使用できません

製品についてのお問い合わせ先

HARIO株式会社

〒103-0006

東京都中央区日本橋富沢町9-3

フリーダイヤル:0120-39-8208

<https://www.hario.com>

HARIO CO., LTD.

9-3 Nihonbashi Tomizawa-Cho,

Chuo-ku, Tokyo 103-0006 Japan

<https://global.hario.com>

部品のお取扱い・お問い合わせ

パーツについて **HARIOパーツ** 検索

またはフリーダイヤル：0120-39-8208

Glass made with

HARIO Glass®

MADE IN JAPAN

Sustainable materials

家庭用品品質表示法による表示

品名	耐熱ガラス製器具
使用区分	電子レンジ用
耐熱温度差	120℃

取扱い上の注意

- 調理の時は外側の水滴をぬぐい、途中で差し水をする時は冷水をさけ、またガラスの部分が熱くなっている時はぬれた布でふれたり、ぬれた所に置かないで下さい。
- 空だきをしないで下さい。
- 洗う時は、研磨材入りたわし、金属たわしやクレンザーなどを使用しないで下さい。
- 使用区分以外には使用しないで下さい。

HARIO株式会社

〒103-0006東京都中央区日本橋富沢町9-3

87428400 GTP-500説明書2301

HARIO

LIVING WITH GLASS

ガラスのある生活

ガラスの
たれ・ソースポット



取扱説明書

お買いあげ誠にありがとうございます。正しくご使用していただくため、この取扱説明書を必ずお読みください。また、お読みになりましたら、大切に保管してください。

お取り扱い上の注意

- ⚠ 電子レンジ以外の加熱器具は使用しないでください。
- ⚠ ガラスは割れるものです。洗浄やご使用時はていねいにお取り扱いください。
- ⚠ お子様には使用させないでください。また、幼児のそばで使用したり、幼児の手の届く所に置かないでください。

- ご使用前には洗浄をしてください。
- ケガ防止の為、お取り扱い前にはヒビや欠けが無いかご確認ください。
- ヒビ、欠け、強いスリ傷の入ったものは、思わぬときに破損することがありますので、使用しないでください。
- ガラス器の内面を、金属スプーンなどで強くたたいたり、強くこすったりしないでください。破損の原因になります。
- ガラス本体が熱いうちにぬれた布でふれたり、ぬれた台の上に置くと、急激な温度変化により破損する場合があります。おやめください。
- 破損した際のお取扱いは、ケガをしないよう十分ご注意ください。
- 廃棄する際は、各自治体の指示に従い分別してください。
- ソース等を注ぐ際は、必ずフタに手を添えて注いでください。
- フタをつかんで持ち運ぶことは、絶対にしないでください。ガラスが抜け落ちる場合があります。
- フタは完全密閉できるものではありませんので、傾けたり倒したりすると中身がこぼれることがあります。ご注意ください。
- フタやパッキンの素材の特性上、色素の濃いものやにんにくなどにおいの強い食品がついたり、長期保存をしますと色がついたり、においが残る場合があります。早めに洗浄してください。



フタを押さえて注ぐ

電子レンジでのご使用上の注意

- ⚠ 突然一気に沸騰して液体が激しく吹き出す恐れがあります(突沸現象)。電子レンジから取り出す際は顔などを近づけないでください。

- 突沸現象については、弊社ホームページwww.hario.comをご参照ください。
- 外側の水滴は拭き取ってから電子レンジに入れてください。
- 空だきや中身が少ない状態で使用しないでください。
- ご使用の際は、お手持ちの電子レンジの取扱説明書をよくお読みください。
- 電子レンジ加熱後は熱くなりますので、持ち運びの際は、なべつかみなどを使って器全体や取っ手を持ってください。また、ビニール製のテーブルクロスなど、熱に弱いものの上には置かないでください。台に置く際は必ずなべしきなどをご使用ください。
- ガラス本体の下に、球面状のトレーなどを敷いて使用しないでください。容器底部とトレーの間に負圧が生じ、ガラスが割れる場合があります。
- 加熱のしすぎにご注意ください。700W以上でのご使用は吹きこぼれる場合がありますので500W、600Wでのご使用ください。
- 本製品はフタをしたまま電子レンジ加熱できます。



突沸に注意



水滴









持ち運びは全体や取っ手を持って


お手入れの方法

- ⚠ 洗浄する場合は、やわらかいスポンジに中性洗剤を使用してください。
- ⚠ やわらかいスポンジでも、下図のようにクレンザーやガラスに傷のつく研磨材、または研磨粒子がついているスポンジなどは使用しないでください。思わぬときに破損する原因となります。

- 本製品は食器洗い乾燥機のご使用ができます。ご使用の際は、お手持ちの食器洗い乾燥機の取扱説明書をよくお読みください。
- 汚れのひどいときは「家庭用漂白剤」を薄めてご使用ください。その際「家庭用漂白剤」の取扱注意事項を必ずお守りください。漂白後は十分に水洗いしてください。
- ガラスの内面を洗う際、十分ご注意ください。内側から力を入れてタオルを絞る様にヒネリ洗いをしますと、破損し思わぬケガをする危険があります。

ご使用いただけます	使用しないでください	
 スポンジ	 クレンザー	 研磨材入 ナイロンたわし
 中性洗剤	 研磨材付 スポンジ	 スチールたわし

注ぐ際の注意

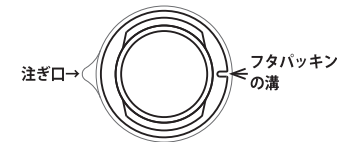

注ぎ口

フタパッキンの溝

材質のご案内



- フタ・本体
耐熱ガラス
(耐熱温度差 120°C)
HARIO Glass®
- HARIO Glass®
MADE IN JAPAN
- フタパッキン
シリコンゴム
(耐熱温度 180°C)
MADE IN VIETNAM

Precautions for Use

- ⚠️ Do not use with any heating device other than a microwave oven.
- ⚠️ Glass is fragile and may break. Handle carefully during normal use and cleaning.
- ⚠️ Do not allow children to use this product. Do not use near children, and store out of reach of children.
- Wash the product before using for the first time.
- To prevent injury, make sure there are no cracks or chips prior to use.
- Do not use the product if it is cracked, broken, or heavily scratched as it may break unexpectedly.
- Do not strike or scrape the inside of the glass container with a metal spoon. Doing so may damage the product.
- Do not touch the glass container with a wet cloth or place on a wet surface while hot, as doing so may damage the glass related to sudden temperature change.
- If the product becomes damaged, please handle any broken pieces with care.
- Follow local rules on garbage disposal when disposing of this product.
- Please make sure to hold the lid with your hand while pour the sauce.
- Never carry the pot simply by holding the lid. Doing so may result in the glass section separating and falling.
- The lid is not airtight. Liquids may spill if the container is not stored vertically.









Precautions for Use in a Microwave

- ⚠️ Liquid may boil rapidly, causing the liquid to suddenly be expelled from the container (known as the bumping phenomenon). Keep your face away from the product when removing from a microwave.
- Wipe off any water droplets from the outside of the product before placing in a microwave.
- Do not heat when empty or with very little inside.
- Consult the instruction manual of your microwave before use.
- To heat effectively, place the product in the center of the microwave or on the center of the turntable.
- The entire product will become hot after heating in a microwave. Use oven gloves to hold the body or handle when carrying. Do not place directly onto items that are not heat resistant such as a vinyl tablecloth. Always place on a pot stand.
- Do not place the glass body on a curved tray. Doing so may cause negative pressure to occur between the base of the container and tray, causing the glass to break.
- Be careful to avoid overheating. Use at 700W or higher can cause contents to boil over so please use at 500W or 600W.
- This product can be heated in the microwave with the lid on.


Product care

- ⚠️ Use a soft sponge and neutral detergent to clean this product.
- ⚠️ Do not use cleansers or sponges that contain abrasives, as doing so may scratch the glass.
- This product is dishwasher safe. Be sure to read the instruction manual provided with your dishwasher before use.
- If the glass is particularly dirty, use a diluted household bleach. Be sure to read the handling precautions of the household bleach thoroughly. Rinse thoroughly with water after bleaching.
- Please take extra care when cleaning the inner side of the glass. Washing the inner side forcefully with a twisting motion as if wringing a towel can cause breakage and unexpected injury.

Compatible		Incompatible			
					
Sponge	Neutral detergent	Cleanser	Abrasive sponge	Nylon abrasive scrubbing brush	Steel scrubbing brush

Precautions when pouring

- When pouring sauce or sauce, set the lid so that the groove of the lid packing is on the opposite side of the spout as shown in the figure.
- If the sauce or sauce ingredients are difficult to come out, remove the lid and pour, or scoop the contents with a spoon.

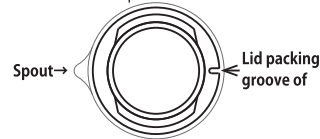

Material guide

