# V60 Range Server Clear V60 レンジサーバー クリア

色で愉しむクリアサーバー



⚠注意

●オーブン・直火は 電子レンジ用 使用できません

## 取扱説明書

お買いあげ誠にありがとうございます。 正しくご使用していただくため、この取扱説明書を必ずお読みください。 また、お読みになりましたら、大切に保管してください。

HARIO

### で使用上の注意

 ●注ぐ際は、必ずフタに手を添えて注 いでください。ポットの中にティーバッ グ等が入っている場合、注ぐ際にティーバッグが勢い良くフタにぶつかり、 フタが外れることがあります。



●ガラスフタについているパッキンは着脱出来ます。ストッパーがある方を下にしてガラスフタに装着してください。

●このサーバーはカップ容量が表示されておりません。 本体に表示されている容量目盛を参考にドリップ量を 調節してください。

●容量目盛は実容量と多少差がありますので、目安目盛としてご使用ください。

●フタの開閉の際は、テーブルなどの上で行ってください。

●ガラスフタを本体にセットする際は、下図のように<u>パッキン空気孔部分が注ぎ口の反対側に向くようにセットしてください。</u>それ以外の向きにパッキンをセットすると、お飲物が出にくくなったり、こぼれたりする原因になります。



フタ 耐熱ガラス 耐熱温度差120℃ フタパッキン

フタパッキンシリコーンゴム 耐熱温度180℃

ガラスボール 耐熱ガラス 耐熱温度差120℃

MADE IN JAPAN

#### お取扱上の注意

▲電子レンジ以外の加熱器具は使用しないでください。



↑<br/>
ガラスは割れるものです。洗浄や<br/>
ご使用時はていねいにお取扱い

電子レンジ

ください。

± 6560

A お子様に使用させないでください。また、幼児のそばで使用したり、幼児の手の届く所に置かない

でください。

b D

●ヒビ、欠け、強いスリ傷の入ったものは思わ ぬときに破損することがありますので、使用 しないでください。

ヒビ、カケ

●ガラス器の内面を、金属スプーンなどで強く たたいたり、強くこすったりしないでください。 破損の原因になります。



ガラス本体が熱いうちにぬれた布でふれたり。 ぬれた台の 上に置くと急激な温度変化により 破損する場合があります。おやめください。



●破損した際のお取扱いは、ケガをしないよう 十分で注意ください。



●破棄する際は、各自治体の指示に従い分別 してください。



ハシジでのご使用

|電子レンジでのお飲物の温めなおしとして、又コー 紅茶・お茶類のポットとしてお使いください。

マき出す恐れがあります 雷子レンジから取り出 は顔など近づけないでくださし



●突沸現象については、弊社ホ―ムペ―ジ www.hario.comをご参照ください。 ●外側の水滴は拭き取ってから電子レンジ



に入わてください。

●空だきや中身が少ない状態で使用しないでください。●ご使用の際は、お手持ちの電子レンジの取扱説明書をよくお読みください。

●加熱の際は、フタをしたままレンジサーバーを庫内の中心又はサーブルの中心に置いてください。

効率よく加熱できます。
●電子レンジ加熱後は熱くなりますので、持ち運びの際は、なべつかみなどを使って器全体や取っ手を持ってください。また、ビニール製のテーブルクロスなど、熱に弱いものの上

必ずなべしきなどをご使用ください。 ○加熱時間の日安○

には置かないでください。台に置く際は

○ 持ち運びは全体や 取っ手を持って

### (お手入れの方法)

⚠洗浄する場合は、やわらかいスポンジに中性 洗剤を使用してください。

↑やわらかいスポンジでも、下図のようにクレンザー やガラスに傷のつく研磨材、または研磨粒子がつい ているスポンジなどは使用しないでください。 思わぬときに破損する原因となります。



●ガラスの汚れのひどいときは「家庭用漂白剤」を薄めてご使用ください。その際「家庭用漂白剤」の取扱注意事項を必ずお守りください。漂白後は十分に水洗いしてください。

●本製品は食器洗い乾燥機のご使用ができます。ご使用の際はお手持ちの食器洗い乾燥機の取扱説明書をよくお読みください。

#### 家庭用品品質表示法による表示 品 名 耐熱ガラス製器具

使用区分 電子レンジ用 120℃

耐熱温度差 取扱い上の注意

しないで下さい。

■調理の時は外側の水滴をぬぐい、途中で差し水をする時は冷水を さけ、またガラスの部分が熱くなっている時はぬれた布でふれた り、ぬれた所に置かないで下さい。

●空だきをしないで下さい。 ●洗う時は、研磨材入りたわし、金属たわしやクレンザーなどを使用

●使用区分以外には使用しないで下さい。 HARIO株式会社

> T103-0006 東京都中央区日本橋富沢町9-3

製品についてのお問い合わせ先 HARIO株式会社

788150 XGS 共涌説明書 1404

〒103-0006東京都中央区日本橋富沢町9-3 フリーダイヤル:0120-39-8208 http://www.hario.com

# V60 Range Server Clear V60 レンジサーバー クリア

色で愉しむクリアサーバー



<u>A</u> caution

Do not use oven and put on direct flame

#### Instruction Manual

Thank you very much for your purchase. To use product correctly, please be sure to read this instruction manual. After reading the manual, store it in a safe place.



#### Using precautions

This server does not

Place your hand on the lid when pouring. If there was a teabag inside the server, it may be hit the lid and cause the lid to come off.

 Rubber packing can be taken off from the lid. When placing, place the stopper side down and attach to the glass lid.

lid. Stopper




show cup quantity.

Please use capacity indication printed on server as your guideline.

 Please note that capacity indication may be different from actual quantity. Use it as your guideline.

To attach and remove the lid, please use table.

When attach the rubber packing to the lid, please follow the instruction below. Always set the air hole face to the other side of the spout. Or it may be difficult to pour or cause to spill the liquid.

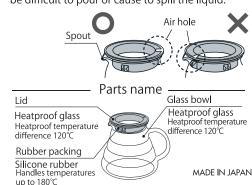

#### Handling precautions

Do not use any other heating equipment except microwave. A Handle the glass with utmost care.



microwave

⚠ Do not let children use the product. Do not put it on the place where children use and able to reach their hands.



direct flame

- Refrain from using cracked, chipped, prhighly-scratched glass since it may break unexpectedly.
- •Do not use a metal spoon inside the glass bowl. It may cause breakage.



crack, chip



tap

Do not touch with wet towel or put on wet table when glass part was too hot. This may be cause cracks because of sudden temperature change.

 Be careful when handling chipped or broken glass parts.

 Please follow your local regulations for disposal.



wet table

#### Handling precautions – Microwave use

Please use the item to reheat your drinks and to serve your coffee and tea.

Be caution that liquid may be boiled suddenly (bumping). Be careful when vou také the item out from microwave

and Do not closely see the item. More information of bumping, please access to www.hario.com.

 Wipe liquid drops on the item before put into microwave.



water drops

 Do not microwave when its empty or too low liquid inside.
 Please follow your microwave instruction manual.

Prease foliow your find towave first dector marida.

Place the item to the center of the microwave turn table with the lid on. It will warm up your drink efficiently.

efficiently.

After take out from microwave the item becomes very hot. Always use oven gloves and hold firmly. Please do not put on plastic table-cross or

on any weak materials to heat.

Heating time guidline


(May be different according to your microwave)

(May be amerene according to your finerowave)				
	Туре	XGS-36 Approx. 360ml	XGS-60 Approx. 600ml	XGS-80 Approx. 800ml
	500W	4 minutes	7 minutes	8 minutes
C	600W	3 and half minutes	6 minutes	7 minutes

## Product care

Do not use sponges with abrasives or metals scouring pads attached.

Do not use abrasive cleansers. This may damage or scratch the surface of the glassware.



- Diluted household bleach may be used for cleaning tough stains. When using household bleach always follow the instructions properly.
   Please wash the glass thoroughly after bleaching.
- Please wash the glass thoroughly after bleaching.
   This product may be washed in a dish washer.
   Please follow the instructions of your dishwasher manual.

#### HARIO CO., LTD.

9-3 Nihonbashi Tomizawa-Cho, Chuo-ku,Tokyo 103-0006 Japan http://www.hario.jp